

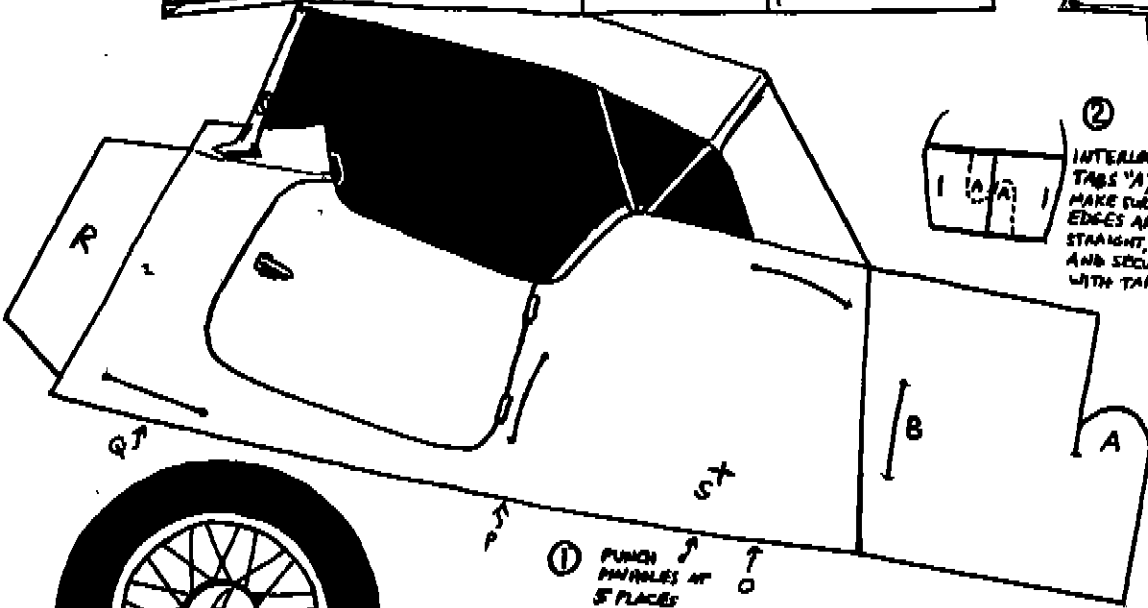
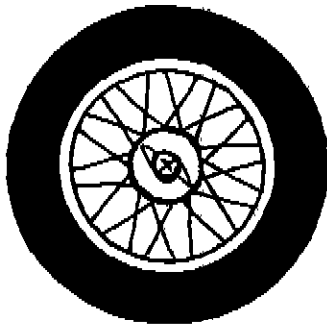
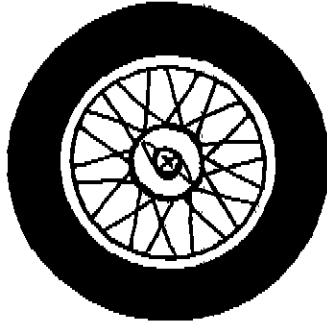
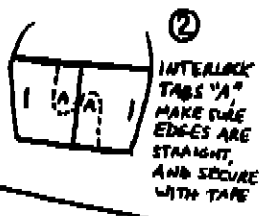
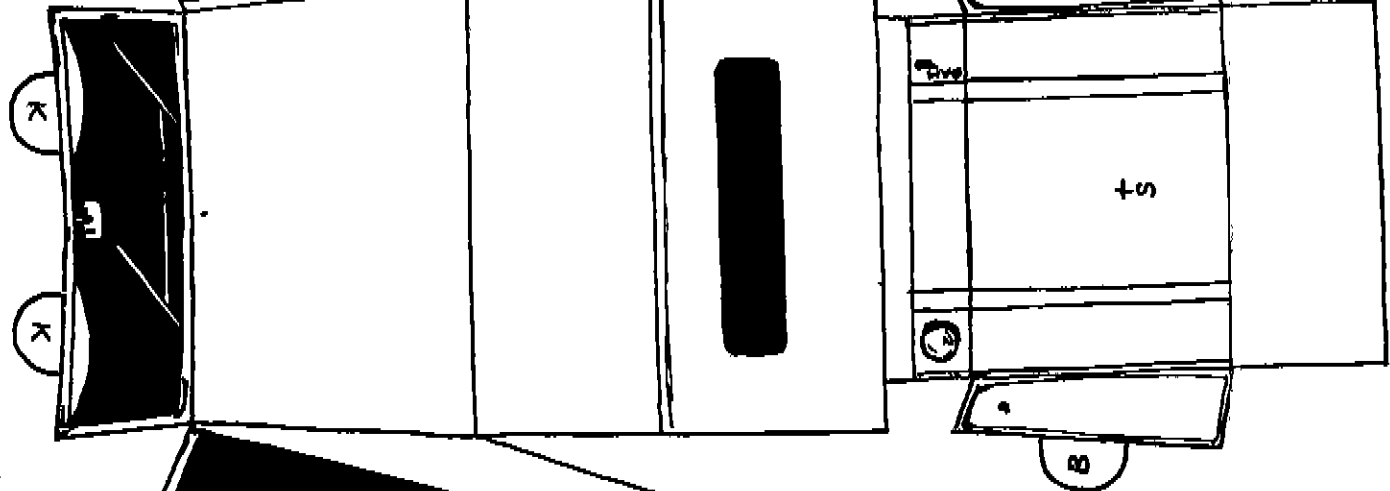
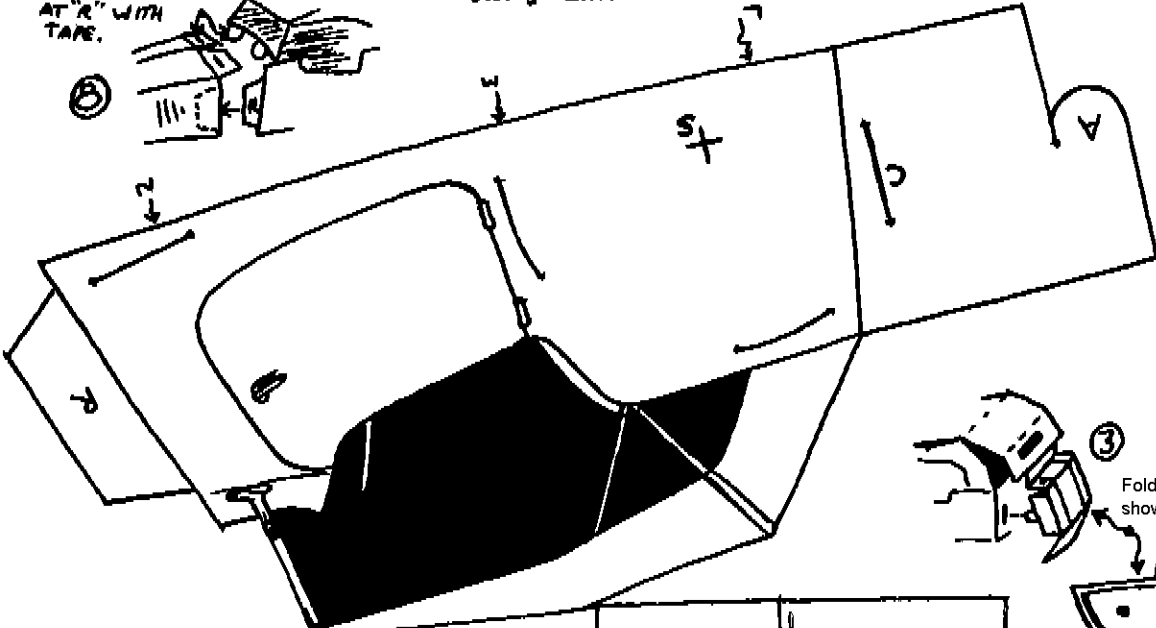


INSERT TABS "K" INTO SLOTS. SECURE AT "R" WITH TAPE.

⑫ FOR AXLES, USE A STIFF WIRE (A STRAIGHTENED PAPER CLIP WILL DO) ABOUT 3" LONG

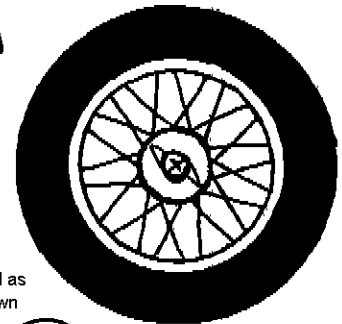

① PUNCH HOLES AT 'S' PLACES MARKED "E" BEFORE ASSEMBLY. ALSO CUT ALL SLOTS WITH A KNIFE OR RAZOR BLADE.

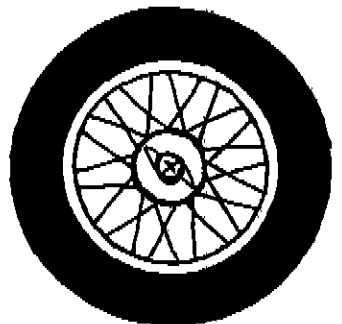